

# 54 Series LIMIT SWITCH SPDT Mechanical Installation Manual

#### **INSTALLATION**

- 1. Attach proper mounting bracket (1) to the switch box housing (4) using four M6x8 socket head cap screws (2) provided.
- 2. Align switch box shaft to top of actuator shaft and engage it.
- 3. Attach bracket to actuator using hardware (3) provided (finger tight only).
- 4. By actuating package the switch and actuator will self-align.
- 5. Tighten bracket to top of actuator.

### SWITCH ADJUSTMENT

Disconnect power prior to opening cover.

- 1. Loosen switchbox cover screws (8) and remove cover (7).
- 2. Rotate actuator to full clockwise position.
- 3. Push down top cam (5a) and turn until switch is activated and then release. Engage cam on to the splined retainer. Spring will maintain cam engagement.
- 4. Rotate actuator to full counter-clockwise position.
- 5. Pull up bottom cam (5b) and turn until switch is activated and then release. Engage cam on to the splined retainer. Spring will maintain cam engagement.
- 6. Place cover (7) on switch box and tighten. Take care to ensure that cover gasket seal is properly located in seal groove. Tighten screws in a cross pattern.

#### ELECTRICAL WIRING (Refer to FLC5402 wiring diagram)


- 1. Remove switchbox cover (see switch adjustment section 1).
- 2. Remove protection plug(s) from conduit entries and install conduit or plugs suitable for type of protection required.
- 3. Engage wires in terminal strip (14) using a small screwdriver (<sup>1</sup>/<sub>8</sub>" blade).

<u>WARNING:</u> To maintain the NEMA 4X, 7 & 9 ratings, the use of proper wiring methods per NEC and local codes is required. Conduit plugs supplied with the switch box are for transit purposes only. To ensure proper protection any unused conduit entry must be closed with appropriate conduit plug.

<u>Hazardous Areas:</u> Class I, Div 1, Groups C, D; Class II, Div 1, Groups E, F, G; Class I, Div2, Groups A, B, C, D; Class II, Div 2, Groups F, G

## **3D INDICATOR SETTING**

- 1. Rotate actuator to closed.
- 2. Remove four screws (13) and remove 3D indicator cover (12).
- 3. Remove screw (10) and lift up 3D indicator from splined retainer.
- 4. Set 3D indicator (9) on splined retainer according to valve position.
- 5. Attach 3D indicator with (10) screw.
- 6. Replace 3D indicator cover (12) and fasten with cover screws (13).
- 7. Check to ensure that seal (11) is properly located in seal groove.

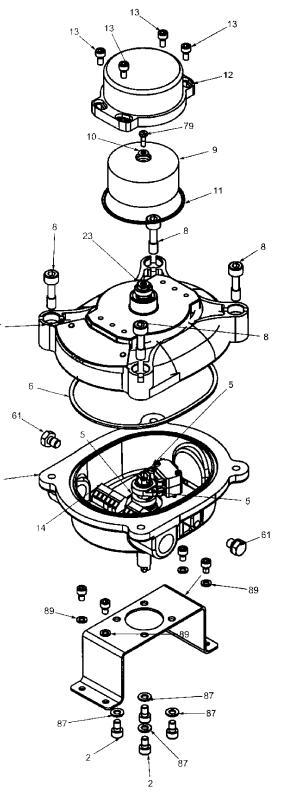

Flow Line Controls, Inc.

P.O. Box 677 · Schriever, LA 70395 · Phone: 985-414-6003 · Toll Free 1-800-815-9226 ·Fax 985-414-6072

www.flowlinecontrols.com